

Field Code Setting

20	0-01	Filter contamination (light)
20	0-02	Filter contamination (heavy)
20	1-01	Long life filter
20	1-02	Super long life filter
20	2-01	Sense from both wall r/c and return air
20	2-02	Use unit air sensor only/ remote sensor
20	2-03	Sense from wall controller only
20	3-01	Display Filter Cleaning symbol
20	3-02	Do not display filter cleaning symbol
20	5-02	Display wall controller sensor on Central Device
20	6-02	Display Wall controller sensor in case of group control
20	8-02	Anti-stratification setting (FXFQ)
22	0-01	Indoor Unit Turned on by Thermostat
22	0-03	Operation Output
22	0-04	Malfunction Output
22	1-01	Forced Off operation via t1/t2
22	1-02	On/Off input via t1/t2
22	1-03	External protection Device input via t1/t2
22	2-01	Thermostat Differential 1°C
22	2-02	thermostat Differential 0.5°C
22	3-01	LL Fan speed On heating thermostat off
22	3-02	Set fan speed on heating
22	3-03	Fan OFF @ Heating thermostat Off
22	4-01	0°C temperature differential
22	4-02	1°C temperature differential
22	4-03	2°C temperature differential
22	4-04	3°C temperature differential
22	5-01	No Automatic restart after power reset
22	5-02	Automatic Restart after power reset
22	6-01	LL fan speed on cooling Thermostat Off
22	6-02	Set fan speed on cooling thermostat off
22	6-03	Fan Off @ cooling thermostat off
22	7-03	Heating to cooling changeover setting
22	8-03	Cooling to heating changeover setting
22	9-02	Disable Auto Function on R/C
23	0-01	Normal Ceiling Height
23	0-02	High Ceiling Height
23	0-03	Higher Ceiling Height
23	4-03	High ceiling louver setting (FXFQ)
23	4-01	Draft Prevention Setting (FXFQ)
23	5-02	High Static pressure setting
23	6-01	External Static Pressure Settings 30 PA
23	6-02	External Static Pressure Settings 50 PA
23	6-03	External Static Pressure Settings 60 PA
23	6-04	External Static Pressure Settings 70 PA
23	6-05	External Static Pressure Settings 80 PA
23	6-06	External Static Pressure Settings 90 PA
23	6-07	External Static Pressure Settings 100 PA
23	6-08	External Static Pressure Settings 110 PA
23	6-09	External Static Pressure Settings 120 PA
23	6-10	External Static Pressure Settings 130 PA
23	6-11	External Static Pressure Settings 140 PA
23	6-12	External Static Pressure Settings 150 PA
23	6-13	External Static Pressure Settings 160 PA
23	6-14	External Static Pressure Settings 180 PA
23	6-15	External Static Pressure Settings 200 PA